


NOVA LUCE


9620144

1

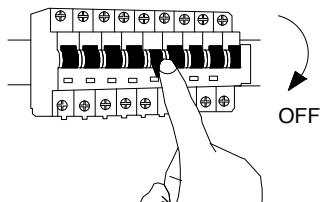


Turn off the general switch

2

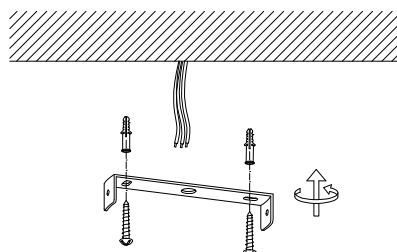


Drill holes
Apply plastic anchors with screws

3

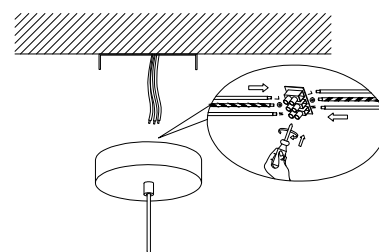


Connect the wires

4

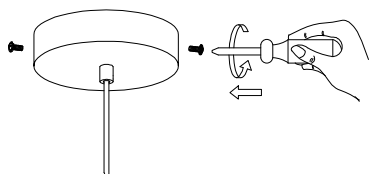


Tie up side screws
to make it stable

5

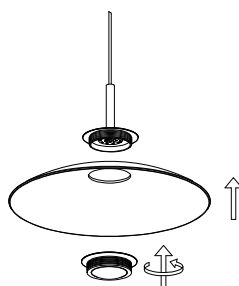

Apply the cap & the bulb
into place by rotate

6

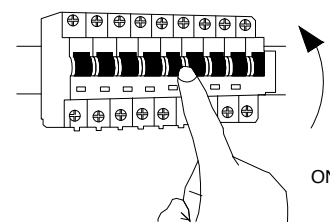

Turn on the general switch

